


# A205

**DORMER**

- Centre Drill
- Zentrierbohrer
- Centerboren
- Foret à centrer
- Brocas de Centrar
- Broca de Centrar

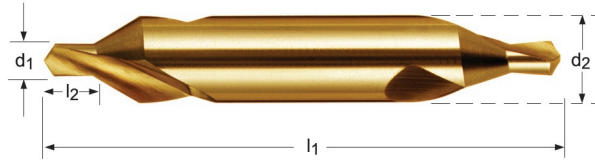

## A205



- 1.1 1.2 1.3 1.4 3.1 3.2
- 1.5 1.6 2.1 2.2 2.3 3.3 3.4 4.1 4.2 4.3 5.1 5.2 5.3 6.1 6.2 6.3 6.4 7.1 7.2 7.3
- 7.4 8.1 8.2 8.3 9.1

$d_1$ Ø mm	$d_2$ Ø mm	$l_2$ max/min mm	$l_1$ mm	e-Code	$d_1$ Ø mm	$d_2$ Ø mm	$l_2$ max/min mm	$l_1$ mm	e-Code
1,00	3,15	1,9 - 1,3	31,5	A2051.0X3.15	2,50	6,30	4,1 - 3,1	45,0	A2052.5X6.3
1,25	3,15	2,2 - 1,6	31,5	A2051.25X3.15	3,15	8,00	4,9 - 3,9	50,0	A2053.15X8.0
1,60	4,00	2,8 - 2,0	35,5	A2051.6X4.0	4,00	10,00	6,2 - 5,0	56,0	A2054.0X10.0
2,00	5,00	3,3 - 2,5	40,0	A2052.0X5.0	5,00	12,50	7,5 - 6,3	63,0	A2055.0X12.5