


G125

DORMER

- 扩孔钻
- Escareador
- Fraises pour logement de tête de vis
- Refrentadores
- Flachsenker
- Counterbore

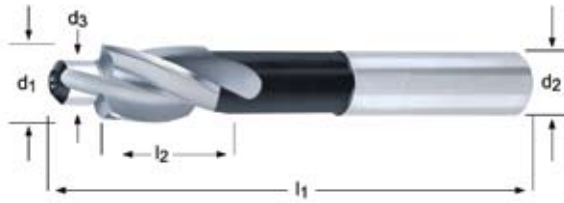

G125



- 1.1 1.2 1.3 2.1 3.1 3.2 7.1 7.2 8.1
- 1.4 1.5 1.6 2.2 3.3 3.4 4.1 4.2 4.3 5.1 5.2 5.3 6.1 6.2 6.3 7.3 7.4 8.2

d_1 $\varnothing z_3$ mm	d_3 $\varnothing e_8$ mm	M	l_1 mm	l_2 mm	d_2 $\varnothing h_3$ mm	z e-Code
6.50	2.50	M 3 t	71	14	5.0	3 G1256.5X2.5 ¹⁾
6.50	3.20	M 3 f	71	14	5.0	3 G1256.5X3.2 ²⁾
6.50	3.40	M 3 m	71	14	5.0	3 G1256.5X3.4 ³⁾
8.00	3.30	M 4 t	71	14	5.0	3 G1258.0X3.3 ¹⁾
8.00	4.30	M 4 f	71	14	5.0	3 G1258.0X4.3 ²⁾
8.00	4.50	M 4 m	71	14	5.0	3 G1258.0X4.5 ³⁾
10.00	4.20	M 5 t	80	18	8.0	3 G12510.0X4.2 ¹⁾
10.00	5.30	M 5 f	80	18	8.0	3 G12510.0X5.3 ²⁾
10.00	5.50	M 5 m	80	18	8.0	3 G12510.0X5.5 ³⁾
11.00	5.00	M 6 t	80	18	8.0	3 G12511.0X5.0 ¹⁾
11.00	6.40	M 6 f	80	18	8.0	3 G12511.0X6.4 ²⁾
11.00	6.60	M 6 m	80	18	8.0	3 G12511.0X6.6 ³⁾
15.00	6.80	M 8 t	100	22	12.5	3 G12515.0X6.8 ¹⁾
15.00	8.40	M 8 f	100	22	12.5	3 G12515.0X8.4 ²⁾
15.00	9.00	M 8 m	100	22	12.5	3 G12515.0X9.0 ³⁾
18.00	8.50	M 10 t	100	22	12.5	3 G12518.0X8.5 ¹⁾
18.00	10.50	M 10 f	100	22	12.5	3 G12518.0X10.5 ²⁾
18.00	11.00	M 10 m	100	22	12.5	3 G12518.0X11.0 ³⁾
20.00	10.20	M 12 t	100	22	12.5	3 G12520.0X10.2 ¹⁾
20.00	13.00	M 12 f	100	22	12.5	3 G12520.0X13.0 ²⁾
20.00	13.50	M 12 m	100	22	12.5	3 G12520.0X13.5 ³⁾

¹⁾ t = 用于螺孔 / t = pour trou taraudé / t = für Kernloch / t = para furo de rosca / t = Para agujero roscado / t = for tap hole

²⁾ f = 用于较细通孔 / f = pour trou de vis précis / f = für Durchgangsloch fein / f = para furo passante raso / f = Para agujero pasante fino / f = for through hole fine

³⁾ m = 用于中等通孔 / m = pour trou de vis moyen / m = für Durchgangsloch mittel / m = para furo passante médio / m = Para agujero pasante medio / m = for through hole medium